



**Step 1.**  
Tape kite longeron sticks to kite at points A. Be sure to fold tape over the edge of the kite.

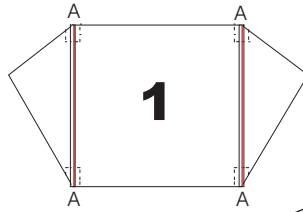

**Step 2.**  
Tape bridle string to kite at points B. Be sure to fold the corners of the tape over the edge of the kite.

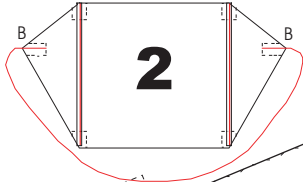

Tape

String


Tape

String


Tape

Tape

**Step 3.**  
Bring points B together with the straws on the inside of the kite. With points B held together find the middle of the bridle string and tie an overhand knot about one inch from the end of the bridle at point C.

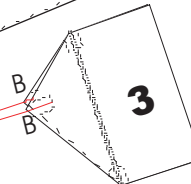

**Step 4.**  
Attach two tails at with tape at points D and your new kite is ready to fly!

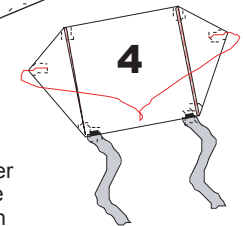

© 2000 www.HighlineKites.com 510-235-KITE or 5483